



Electronic Airbag Inflation system



WARNING: BEFORE USE THE SYSTEM READ CAREFULLY THE USER MANUAL AT LINK HTTPS://ARIBAG.BCREDTESLA.COM#MANUALI AND INSTALL VRACE RR 2.0 APP ON YOUR SMARPHONE




ATTENZIONE: PRIMA DI UTILIZZARE IL SISTEMA LEGGERE ATTENTAMENTE IL MANUALE DI ISTRUZIONI DISPONIBILE AL LINK LINK HTTPS://ARIBAG.BCREDTESLA.COM#MANUALI E SCARICARE L'APP VRACE RR 2.0 SUL PROPRIO SMARTPHONE



HOW TO PLACE THE CPU



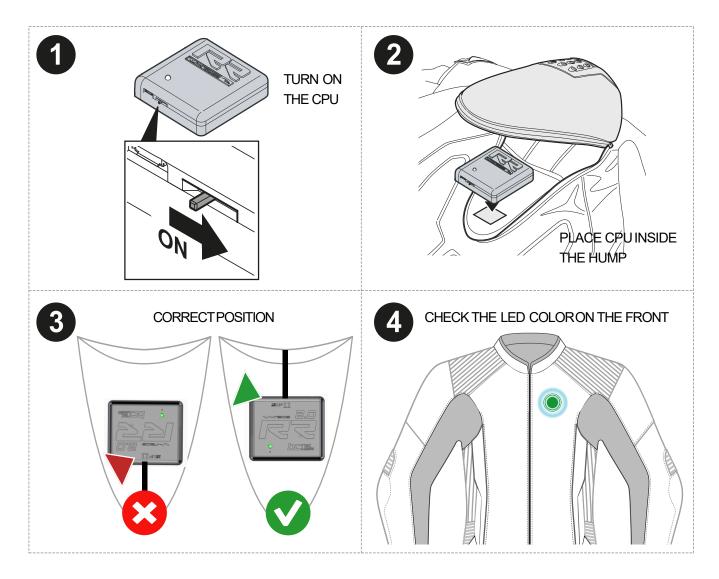

LED DIAGNOSTIC

After activating the CPU, you can check the proper functioning of the system via LED interface

LED COLOR	MEANING	ACTION (IF REQUESTED)
Solid Red	Recharge required	Recharge the CPU battery via USB. Do not start a driving session under these conditions
Flashing Yellow (3 flashes)	System ready GPS not connected	
Flashing Green (3 flashes)	System ready GPS connected	
Solid Purple	System activated	Pyrotechnic charge and cartridge replacement required. Then, confirm CPU RESET in the APP SETTINGS

AIRBAG RECHARGE



1

FOLLOW VIDEO GUIDE INSTRUCTION FOR RECHARGE
https://www.youtube.com/watch?v=FKb3DhQVZQg&t=4s

2



CLICK ON "SETTING", SELECT "RESET CPU" AND RESET THE CPU





In caso di caduta è suggerito l'invio in fabbrica del Sistema per i controlli di sicurezza. RICARICA e USO senza sudetti controlli sono a proprio RISCHIO e PERICOLO.



In case of crash, we strongly suggest to send system back to factory to check and service.

RESET and USE without factory check will be done at your OWN RISK

APP V-RACE RR 2.0

bcred

USE OF THE APP IS MANDATORY ONLY TO CONFIGURE WIFI

DOWNLOAD 1. APP





2 3 4 5 6 7 8 9 0

CONNECT DEVICE AND ENTER DEVICE

CPU CONFIGURATION





Sergent ConstanEn Apostol 11, sect.6, Buchaest e-mail: airbagsupport@bcredtesla.com

MANVRT0003- rev.02