



Sergeant Constantin Apostol 11, sect.6, Bucharest
e-mail: airbagsupport@bcredtesla.com

MANVRT0003- rev.05

BC^{red}tesla

RR

V-RACE 2.0

**DUAL
CHARGE
CAPABLE**

Electronic Airbag Inflation system



WARNING: BEFORE USE THE SYSTEM READ CAREFULLY THE USER MANUAL AT LINK [HTTPS://AIRBAG.BCREDTESLA.COM#MANUALI](https://airbag.bcredtesla.com#MANUALI) AND INSTALL VRACE RR 2.0 APP ON YOUR SMARTPHONE



ATTENZIONE: PRIMA DI UTILIZZARE IL SISTEMA LEGGERE ATTENTAMENTE IL MANUALE DI ISTRUZIONI DISPONIBILE AL LINK [HTTPS://AIRBAG.BCREDTESLA.COM#MANUALI](https://airbag.bcredtesla.com#MANUALI) E SCARICARE L'APP VRACE RR 2.0 SUL PROPRIO SMARTPHONE




RIDER QUICKSTART GUIDE

USER
GUIDES



HOW TO PLACE THE CPU / INSERIRE LA CPU

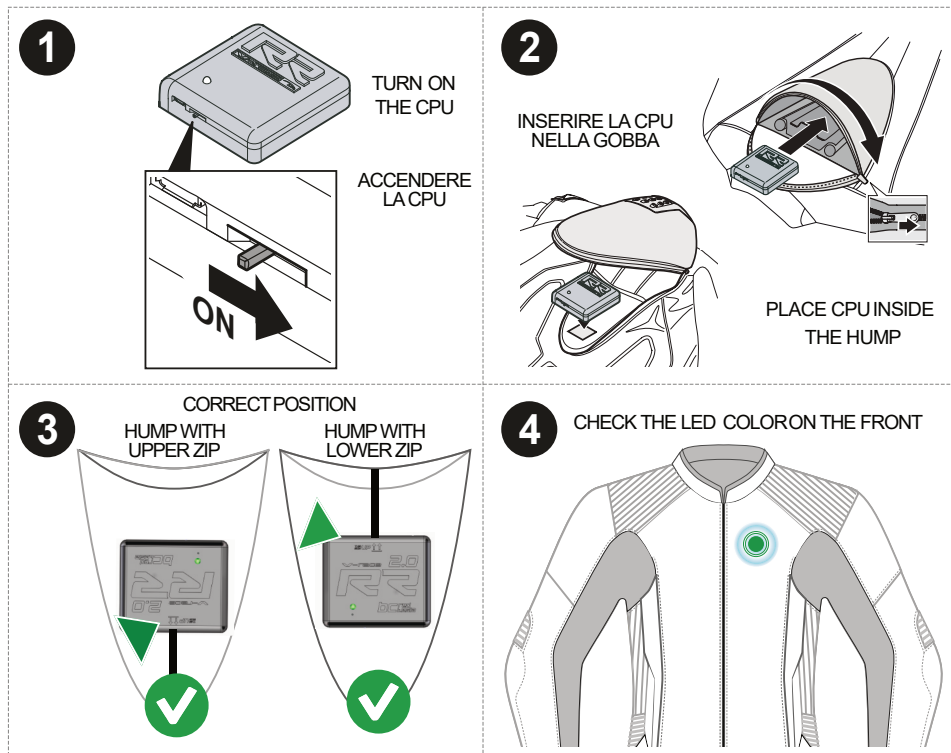

LED DIAGNOSTIC

After activating the CPU, you can check the proper functioning of the system via LED interface

LED COLOR	MEANING	ACTION (IF REQUESTED)
	Solid Red Rosso Fisso	Recharge required Ricaricare Batteria Recharge the CPU. Do not start a driving session Ricaricare la CPU. Non iniziare una sessione di guida
	Flashing Yellow (3 flashes) Giallo Lampeggiante	System ready GPS not connected Sistema Pronto
	Flashing Green (3 flashes) Verde Lampeggiante	System ready GPS connected Sistema Pronto
	Solid Purple Viola Fisso	Inflator not connected or deployed Check inflator cable or replace it if deployed Controlla la connessione dell'inflator o sostituisilo se attivato

AIRBAG RECHARGE / RICARICA AIRBAG



APP V-RACE RT 2.0

USE OF THE APP IS MANDATORY ONLY TO CONFIGURE WIFI

DOWNLOAD APP

